

Коды ошибок сплит-систем Shivaki SSH-PM072DC/SRH-PM182DC/PM242DC/PM362DC

S/N	Fault description	Fault code display	Unit phenomenon
1	Over/low power voltage protection	F7	Stop
2	Over/low main line voltage protection	F1	Stop
3	Over power current protection	P8	Stop
4	Low pressure switch protection	H6	Stop
5	High pressure switch protection	P2	Stop
6	Indoor high temp protection in heating mode	P6	Stop
7	Drain pump failure	H1	Stop
8	Communication failure of wire controller	H2	Stop
9	IPM module protection	L9	Stop
10	Indoor fan motor failure	E4	Stop
11	Outdoor ambient temp sensor failure	F6	Stop
12	Overload protection in cooling mode	P4	Stop
13	Suction temp sensor failure	FA	Stop
14	High discharge temp protection	P5	Stop
15	Low discharge temp protection	H5	Stop
16	4way-valve failure	H8	Stop
17	Indoor coil temp sensor failure	E3	Stop
18	Indoor ambient temp sensor failure	E1	Stop
19	Outdoor coil temp sensor failure	E2	Stop
20	Outdoor defrost temp sensor failure	E2	Stop
21	Evap inlet temp sensor failure	H3	Stop
22	Evap outlet temp sensor failure	H4	Stop
23	Outdoor DC fan motor failure	F1	Stop
24	Outdoor DC fan motor current abnormal protection	LD	Stop
25	DC fan motor phase lost protection	LE	Stop
26	DC fan motor step lost protection	LF	Stop
27	DC fan motor IPM protection	LH	Stop